



INSTALLATION INSTRUCTIONS

PART DESCRIPTION: SDG Snout Casting

APPLICATION: 2.38L, 2.7L, and 3.0L IHI Superchargers

REVISION: 1

ORIGINAL RELEASE DATE: 28 MAR 2022


REVISION DATE: 01 AUG 2022

Thank you for choosing the Hellephant Killer snout; the highest-flowing, best performing snout for the 2.38L, 2.7L, and 3.0L IHI superchargers!

The following instructions will help you properly install your new snout onto your supercharger.

Step 1: Insert Snout TMAP Sensor

- Apply a small amount of lubricant to the sensor O-ring.
- Insert sensor into its respective hole, and align the mounting hole with the threaded hole on the snout.
- Thread the sensor's fastener into the snout by hand with a ratchet or wrench, making sure not to cross-thread.
- Tighten to 6N-m.

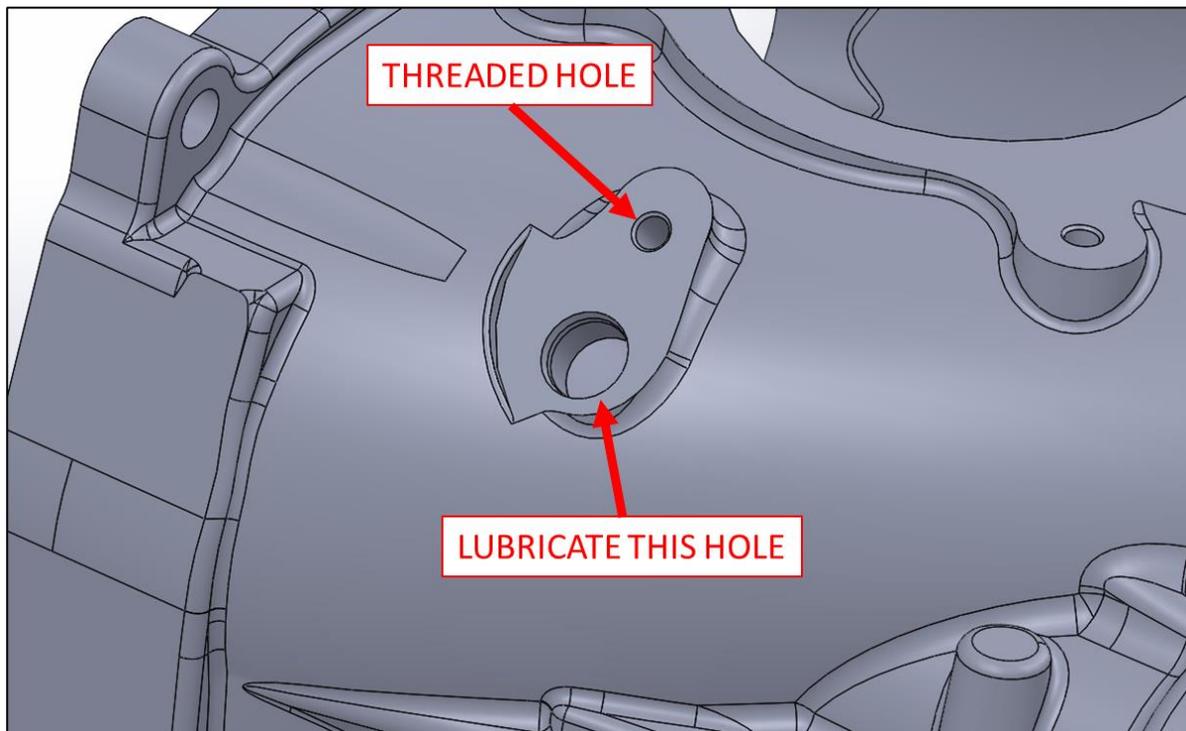

****NOTE:** The sensor's mounting fastener comes from the factory with a dry blue locking compound. If this sensor has been removed several times, the locking compound may have lost its ability to retain itself in the threaded hole. A small amount of blue liquid locking compound can be utilized to aid in the sensor's ability to resist loosening on the supercharger.**


Step 2: Clean the Sealing Surfaces

- Ensure the bearing plate and snout sealing surfaces are clean of anaerobic residue or any other contaminants. SDG recommends acetone for cleaning this surface. DO NOT scrape with a sharp or jagged object; the anaerobic should come off with application of the acetone.
- Even if you have a freshly installed billet bearing plate from SDG, it is still best practice to clean the surface prior to applying the anaerobic sealant to the bearing plate.
- Failure to do this will result in an unsealed joint, which will cause unmeasured air to leak into the supercharger and pesky tuning issues!

INSTALLATION INSTRUCTIONS

Step 3: Anaerobic Application

- Apply a thin bead of anaerobic to the sealing perimeter of the snout as shown below. Note that the bead is inside the bolt pattern, and goes around the coupler area.
- Once the bead is applied, ensure that there are no discontinuities in the form of gaps or bubbles.

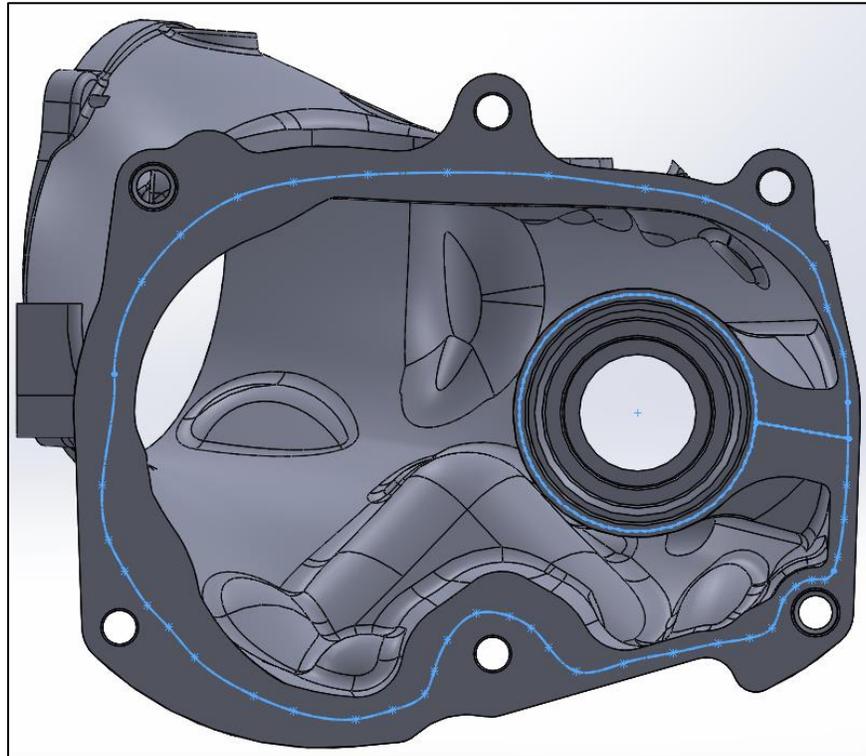


Step 4: Align the Snout Pins

- Align the pins on the snout's coupler with the bushings on the rotor's coupler, being careful to not to touch/rub the sealing surfaces together.
- Once the pins are aligned and engaged into the bushings, insert 2 fasteners into the snout, through their respective holes in the bearing plate, and begin threading them in with fingers (no socket, no wrench) for a few rotations. This will prevent the snout from moving around too much, potentially smearing the sealant.
- Apply axial force to the pulley by hand, press the pins into the bushings as far as you can. This fully aligns the snout with the bearing plate.

INSTALLATION INSTRUCTIONS

Step 5: Seat the Snout

- Insert the remaining 4 fasteners into their respective holes and thread in with fingers. The fasteners should be easily threaded until they meet the surface of the snout.
- In the pattern shown below, tighten the fasteners by hand with a ratchet or wrench until the snout is fully seated against the bearing plate. It may take several trips around the snout to get the two surfaces mated together properly.

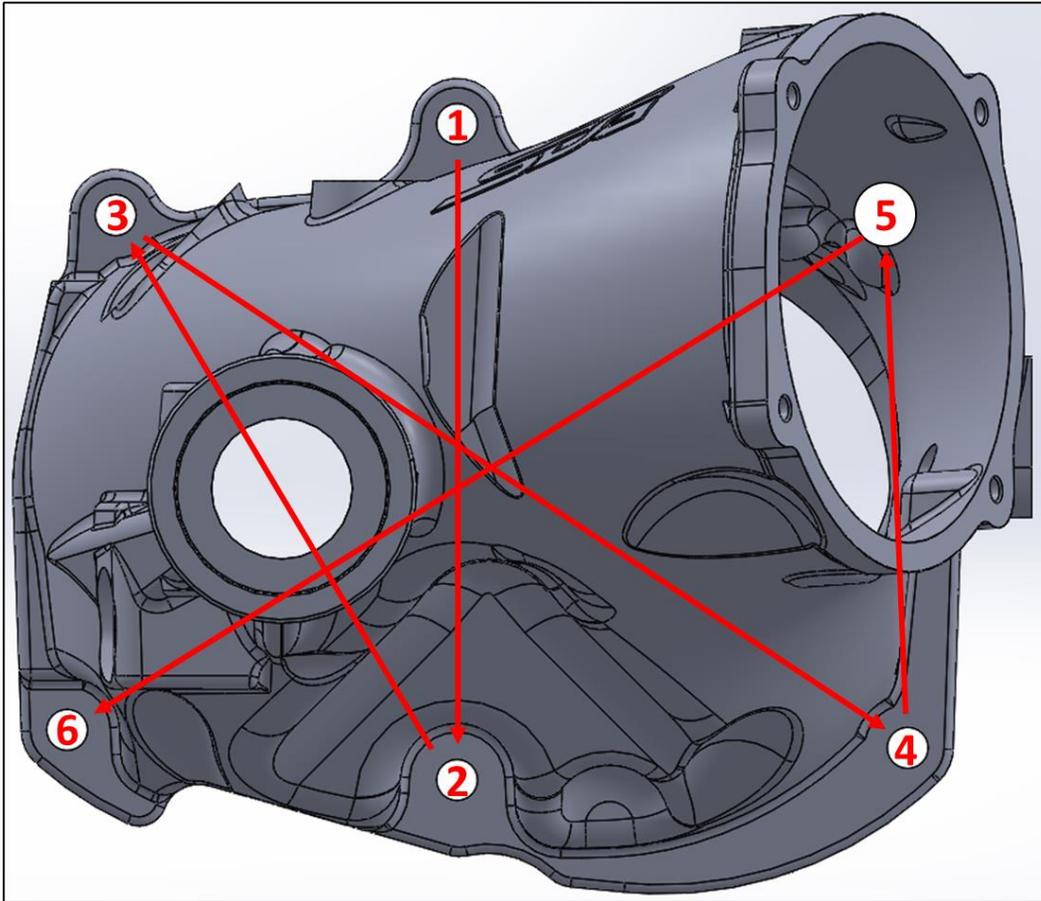

Step 6: Tighten the Snout Fasteners

- In the pattern shown in the previous step, tighten each fastener to 35 N-m (\approx 26 ft-lb).
- In case there was some movement or relaxation of the sealing joint, repeat the torquing process to ensure fasteners are tightened to specification.